

 
QUICK START GUIDE

Please read the full owner's manuals for all your products including safety warnings, maintenance instructions before use. Scan the QR code or visit www.wolverineairsoft.com/documentation



INSTALL BATTERIES

Standard Setup: 7.4 LiPo Battery (250 - 500 mAh). Disconnect the battery when not in use.

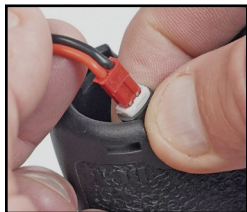

Connect the LiPo to the JST connector in the grip.



Tank Grip owners will find the JST connector behind the side battery door.



Some options may require the battery to be stored in buffer tube. [See 4 for disassembly instructions]

OPTIONAL SETUP

MTW Battery Grip



1 Use a 2mm Hex Key to remove the screw.



2 Install two CR123 batteries as indicated on the tray and reinstall screw.



3 Use the power switch to turn your gun on [|] or off [O].

CONNECT AN AIR SOURCE

Standard Setup: Flex line and regulator operating in the 60-140 PSI range. We recommend the STORM Category 5.



1 Mount the regulator on your tank and set the pressure to 110 PSI.



2 Connect the flex line to your regulator and grip line, or...



If a FRAC is installed, extend your stock and connect the line as shown.

OPTIONAL SETUP

WRAITH X HPA or Heretic Labs Tank Grip



1 Screw the tank clockwise into the regulator until you hear it pressurize.



2 Find the pressure adjustment screw on the bottom of the tank grip, or the top of the WRAITH X. Use a 3/32" hex key to set the pressure to 110 PSI.



WRAITH: Use the dial to loosen the tank cover, adjust the cover for comfort, and re-tighten it.



LOAD BBS

We recommend BBs with a weight of 0.28g or higher.



1 Insert a loaded magazine.

IMPORTANT!



2 Press the bolt catch to enable firing. This must be done each time a new magazine is installed.

BASIC OPERATION


Always wear eye protection when operating your replica.



Use the selector switch to switch between SAFE, SEMI and FULL AUTO modes.



Hold the trigger for 5 seconds to switch between available fire modes. See owner's manual for list of available options.

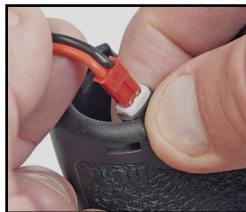

For more options, hold the trigger while powering up to enter Live Fire Tuning Mode. See your FCU owner's manual for directions.

BLINC Bluetooth® FCU

If your replica has the BLINC installed, download the Wolverine Airsoft App to unlock it's full potential.



DISASSEMBLY

Standard Setup



1 Remove the magazine and fully extend the rear body pin.




2 If a FRAC is installed, press and hold the airline release button and press the airline fitting through.



3 Hinge the receiver set open to access wiring and airline routing.

OPTIONAL SETUP

WRAITH X or QUAKE MTW. If using a WRAITH X, remove the HPA tank first and fire two shots to vent pressure.

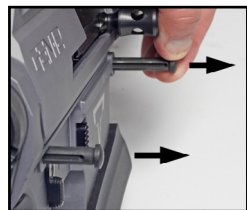

1 Remove the magazine and fully extend BOTH body pins.



2 If a FRAC is installed, press and hold the airline release button and press the airline fitting through.



3 Carefully pull the upper receiver forward and away from the lower receiver.

Please read the full owner's manuals for all your products including safety warnings, maintenance instructions before use. Scan the QR code or visit www.wolverineairsoft.com/documentation

