

Please read the full owner's manuals for your MTW including safety warnings, maintenance instructions before use. Scan the QR code or visit www.wolverineairsoft.com/documentation



1. BATTERY



Connect a 7.4 LiPo Battery (250 - 500 mAh) to the JST connector in the grip. Use the included grip plate to retain your battery.

2. TANK / REGULATOR




Mount the regulator on your tank and set the pressure to 110 PSI. We recommend STORM Category 5 or other HPA regulator operating in the 80-160 PSI range.

3. MAGAZINE



Load your magazine with 0.28g or higher BBs and hook the front of the magazine into the magwell. Rock the rear of the magazine into the magwell until the magazine locks into place.

4. FIRE MODES

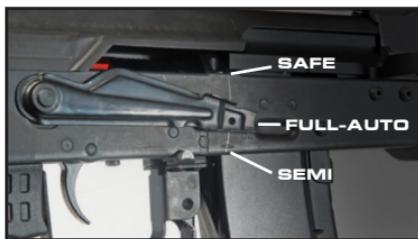

Set your fire mode to SEMI or FULL AUTO to begin firing. Always wear eye protection when operating your replica.

5. ADJUST HOP



To adjust the hop, pull the charging handle back to reveal the hop-up wheel. Rotate the wheel clockwise to increase the amount of hop and counter-clockwise to decrease it.

6. TUNING



Your MTW can be tuned manually or via Bluetooth with the Wolverine Airsoft app. Scan the QR code to get started.



7. STORAGE



Remove the magazine and make sure your barrel is empty and your MTW is depressurized by firing several shots. Disconnect the battery before storage.

8. CARE



Your MTW features steel components which may develop surface rust over time when exposed to moisture or humidity. To protect exposed metal surfaces, apply a light coat of silicone-based gun grease using a lint-free cloth.



WOLVERINE
AIRSOFT

DISRUPTIVE DESIGN, PROVEN PERFORMANCE.