

SOLENOID CLEANING GUIDE



**WOLVERINE
AIRSOFT**




Begin by removing your solenoid from your Wolverine Airsoft engine.



Use a 2.5mm Allen Wrench to remove the cap from the solenoid by rotating counterclockwise.



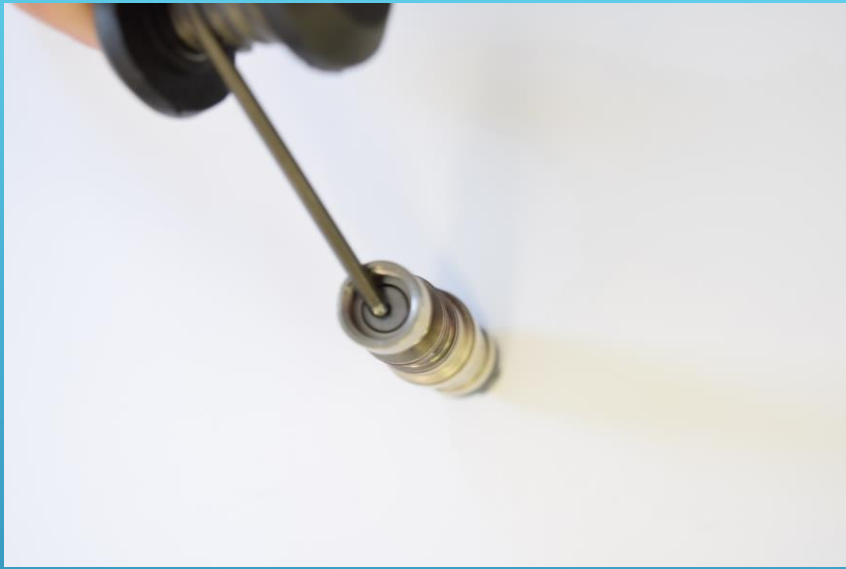

Use a blunt instrument (your Allen Wrench should work) to open the valve by pushing on the piston in the center hole as shown below. This will open the valve for cleaning.



While holding the valve open use compressed air to remove the debris from the valve. It is important to not scratch the seal. The debris will usually be found just behind the front oring as indicated in the image.

After cleaning the solenoid replace the brass end cap using the 2.5mm Allen wrench and reinstall the solenoid in your unit.



