

# MTW


## QUICK START GUIDE

### ITEMS YOU WILL NEED

- **7.4 LiPo battery** which will fit inside the MTW buffer tube. Most batteries in the 250-500 mAh range will work. [The MTW Milspec Series with Reaper M does not require a battery].
- **Charged HPA tank** [Always carefully follow the tank manufacturer's instructions when filling and using HPA tanks. They are very safe when used properly, but when misused or abused, they can cause serious injury or death.
- **STORM Regulator** or other airsoft regulator in the 60-140 PSI range.
- **Air line** with Foster spec fittings [standard in US airsoft market]

### STEP ONE

Pull the 2-Pin JST RCY connector out from the buffer tube and connect the battery. Note that the battery will always draw current when connected, so the MTW should not be stored with the battery connected.

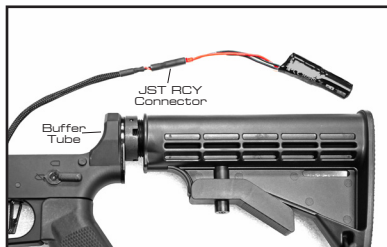


### STEP TWO

Insert the battery fully into the buffer tube. The braided line should lay to the left side of the control board wire guide. On the Forged Series, the Premium FCU should also be inserted into the buffer tube.




### STEP THREE

Completely extend the body pins on the lower receiver. Note that the pins on a new MTW can be stiff and you may find it easier to do this using a non-marring punch such as the backside of a plastic handled screwdriver to get the pin started.

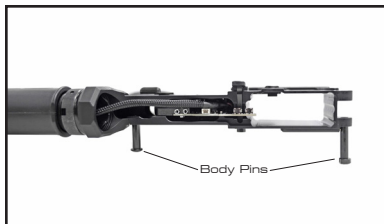

### STEP FOUR

Attach the upper and lower receivers by lining up the front lugs and pushing the body pin all the way through. Insert the air line through the lower receiver and pistol grip. Finally, close the upper and lower receivers and push in the rear body pin, ensuring the braided wire is not pinched in the process.

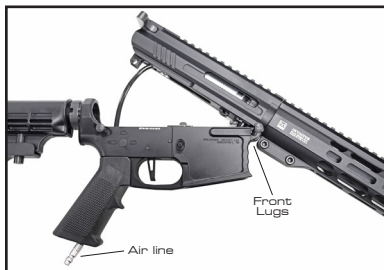


### STEP FIVE

Load the magazine and insert it into the lower receiver. We recommend 0.28g or higher BBs. Then, **press the bolt catch** to reset the automatic empty magazine detection and enable firing.



### STEP SIX

Mount your regulator to your tank and set the pressure to 100 PSI (see manufacturer's instructions). Connect the tank air line by pulling down on the collar of the Foster fitting and pushing the male fitting into the female.

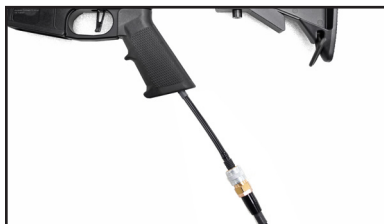

Please read the full owner's manual including safety warnings before use. Scan the QR code or visit [www.wolverineairsoft.com/documentation](http://www.wolverineairsoft.com/documentation)

